
Assembly Instruction

SC Simplex Connector (0.9mm)

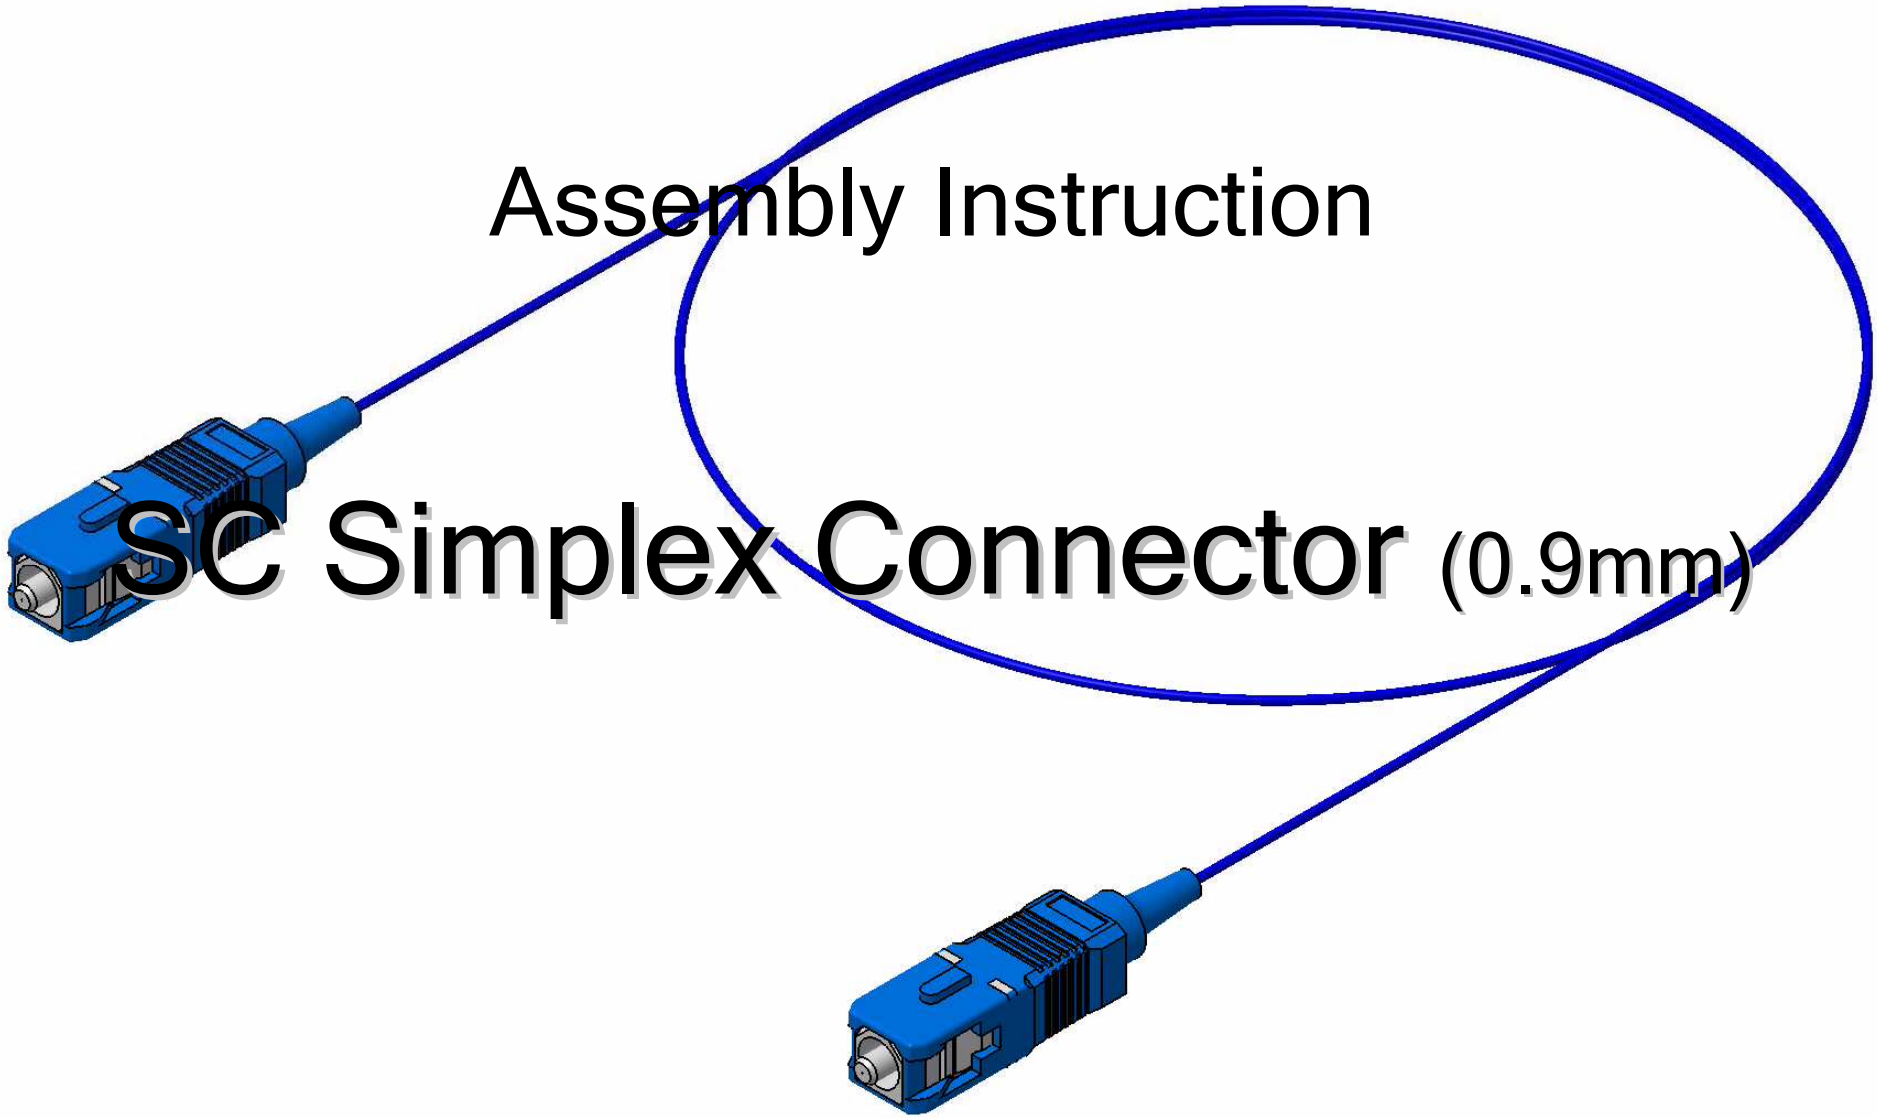


FO&S Dept.

Copyright © 2005 SUNCALL CORP. All rights reserved


Fine Precision, Nano Solution
SUNCALL CORP.

Connector Components


Coupling

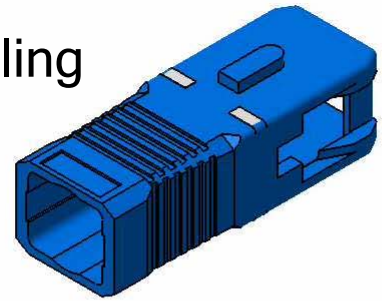

SC Pre-assembly Connector 0.9mm

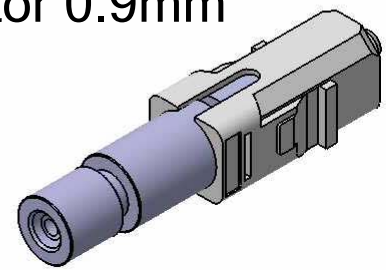

Rubber Boot

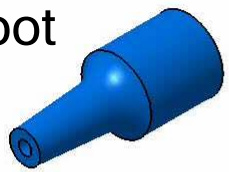


Buffered Fiber

Copyright © 2004 SUNCALL CORP. All rights reserved

Fine Precision, Nano Solution
SUNCALL CORP.

Assembly Process 1

Slide the boot over the Buffered Fiber.

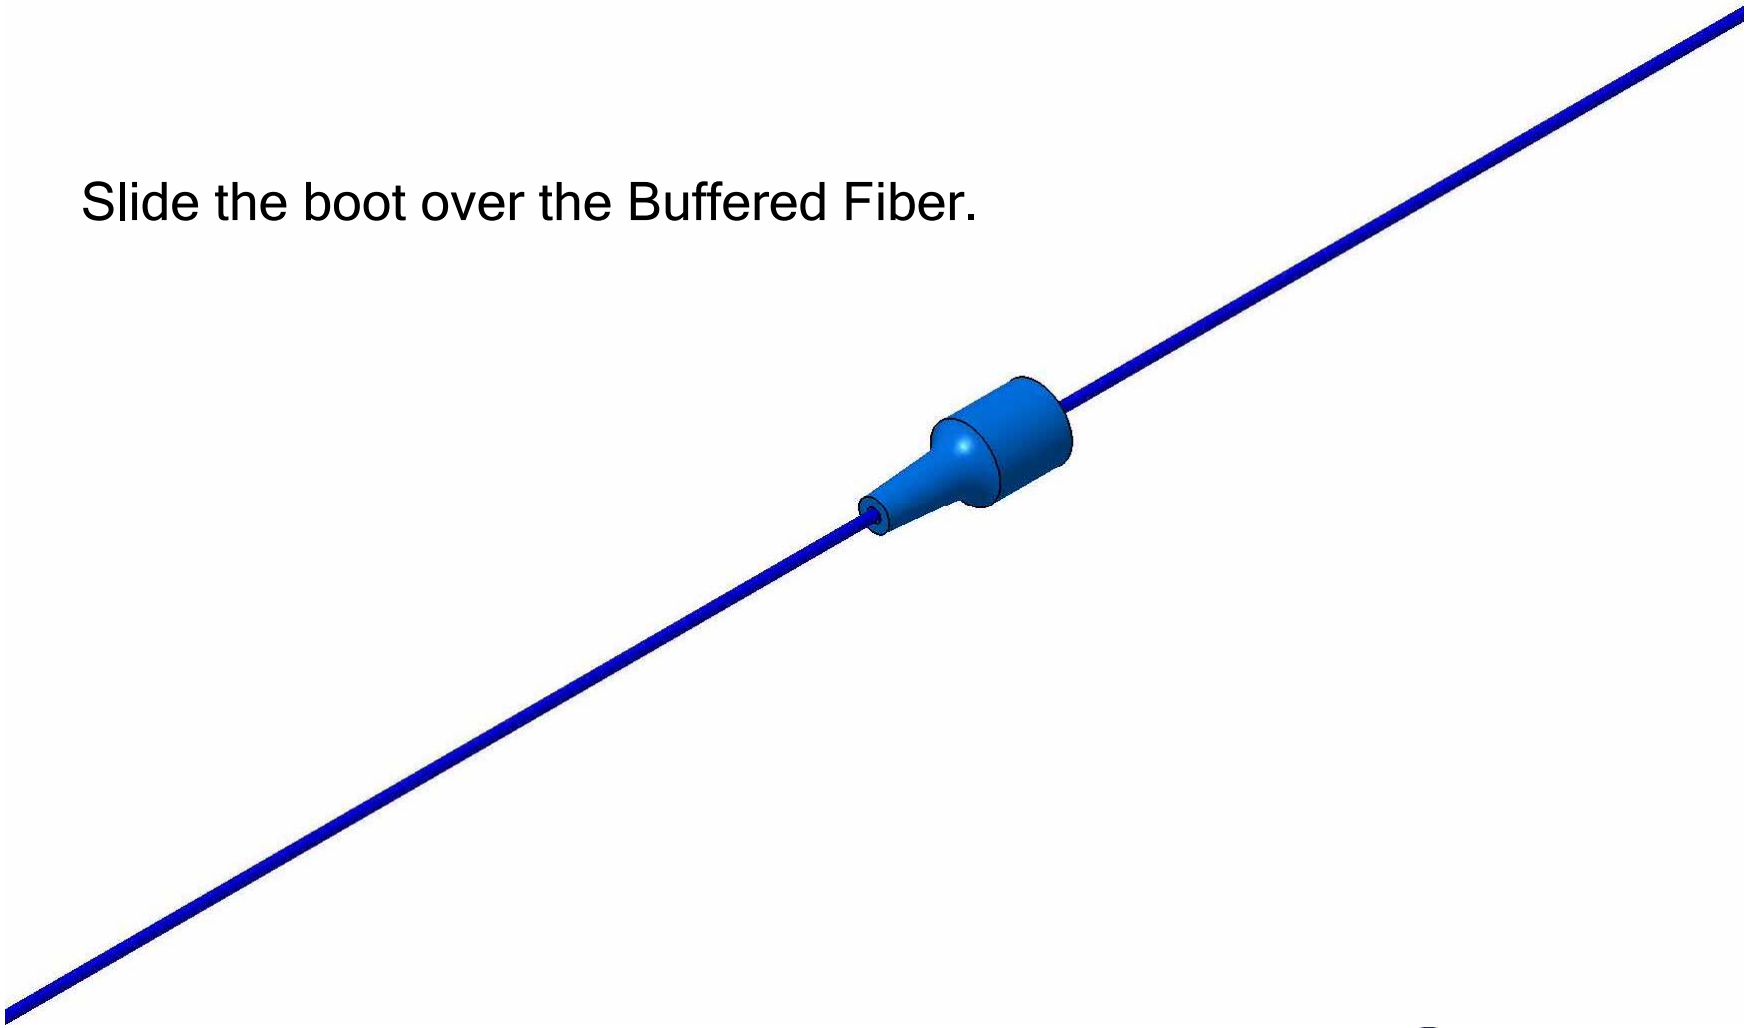


Copyright © 2004 SUNCALL CORP. All rights reserved

Fine Precision, Nano Solution
SUNCALL CORP.

Assembly Process 2

Using the cable stripper, strip the fiber buffer.

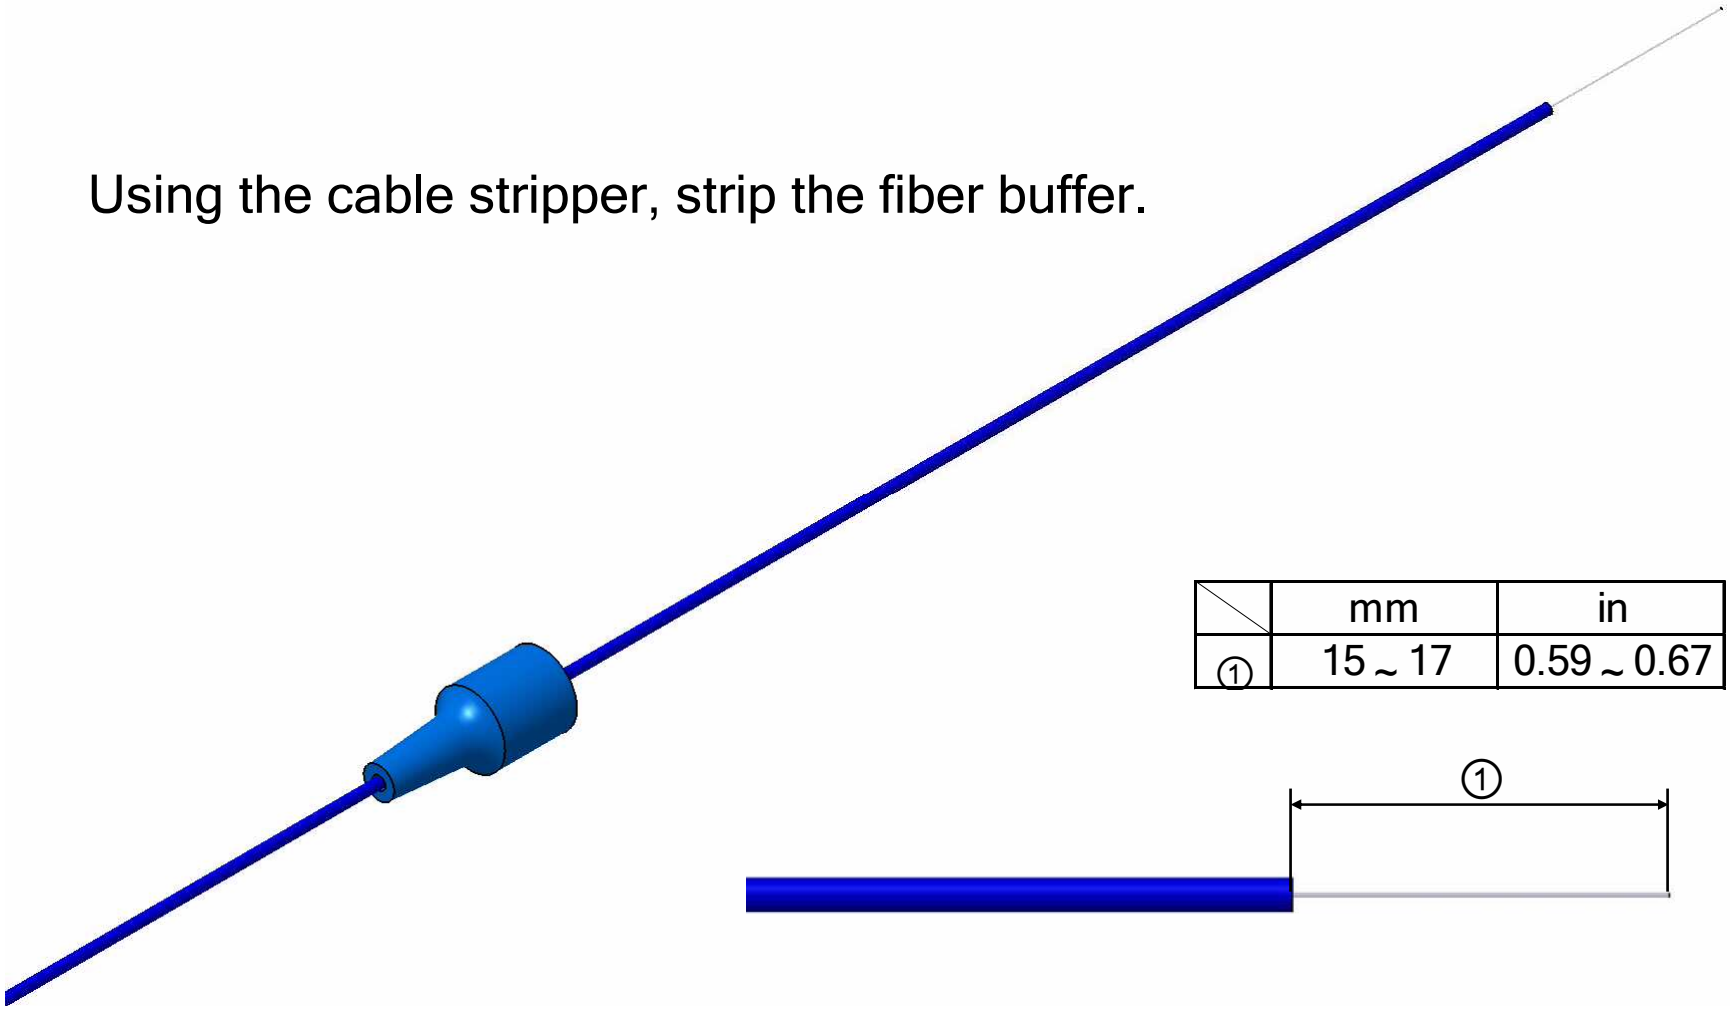


	mm	in
①	15 ~ 17	0.59 ~ 0.67

Copyright © 2004 SUNCALL CORP. All rights reserved

Fine Precision, Nano Solution
SUNCALL CORP.

Assembly Process 3

Inject epoxy into ferrule by slowly pressing the syringe plunger, and insert fiber optic cable through the end of the SC pre-assembly connector. And after that, polish the fiber.

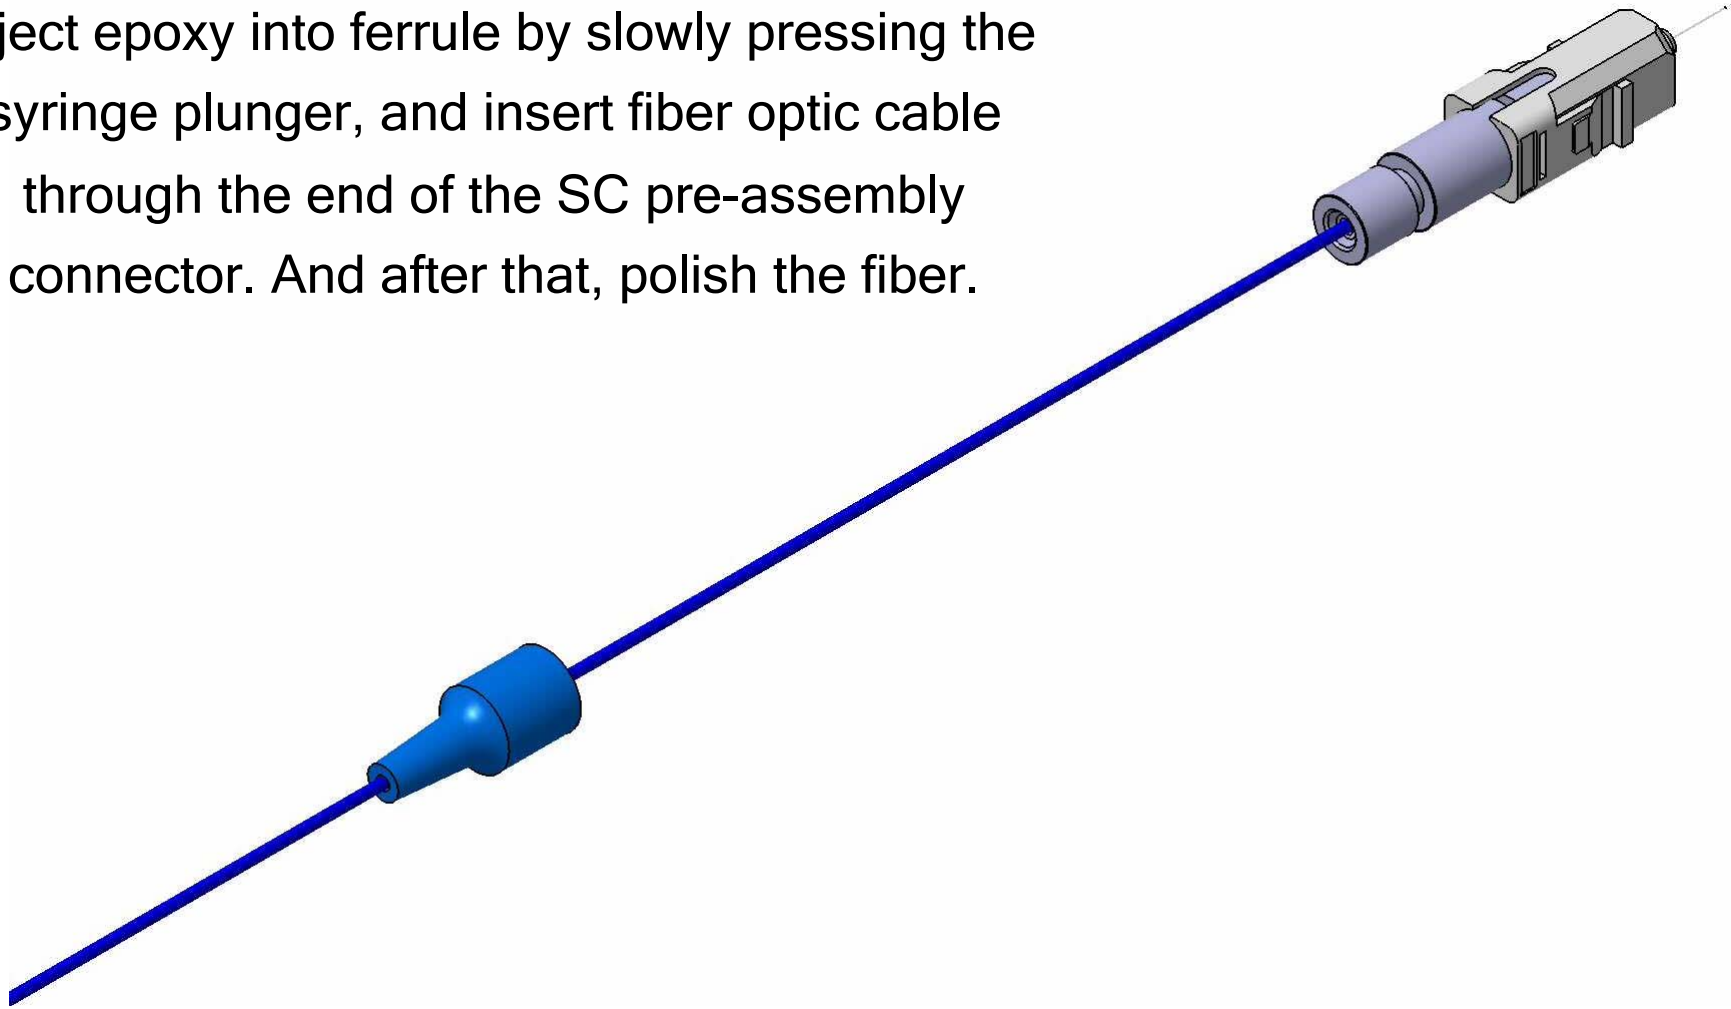


Copyright © 2004 SUNCALL CORP. All rights reserved

Fine Precision, Nano Solution
SUNCALL CORP.

Assembly Process 4

Slide the boot over the end of connector

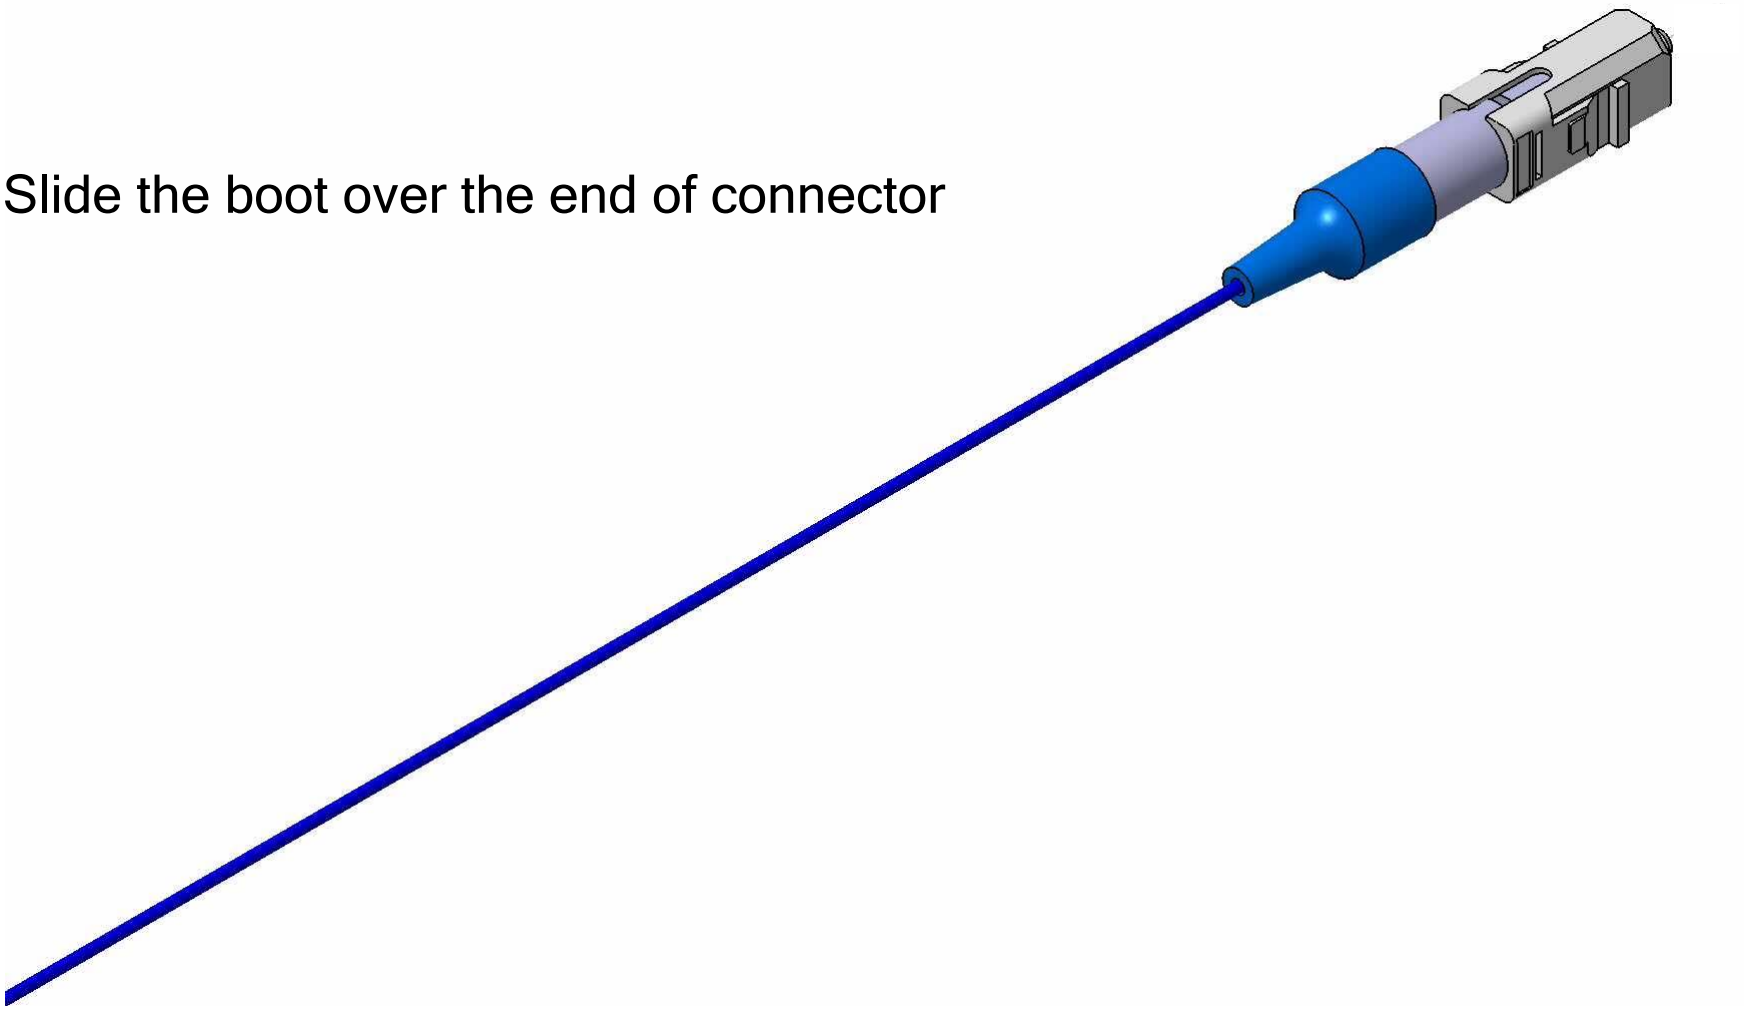


Copyright © 2004 SUNCALL CORP. All rights reserved

Fine Precision, Nano Solution
SUNCALL CORP.

Assembly Process 5


Slide the coupling over the connector

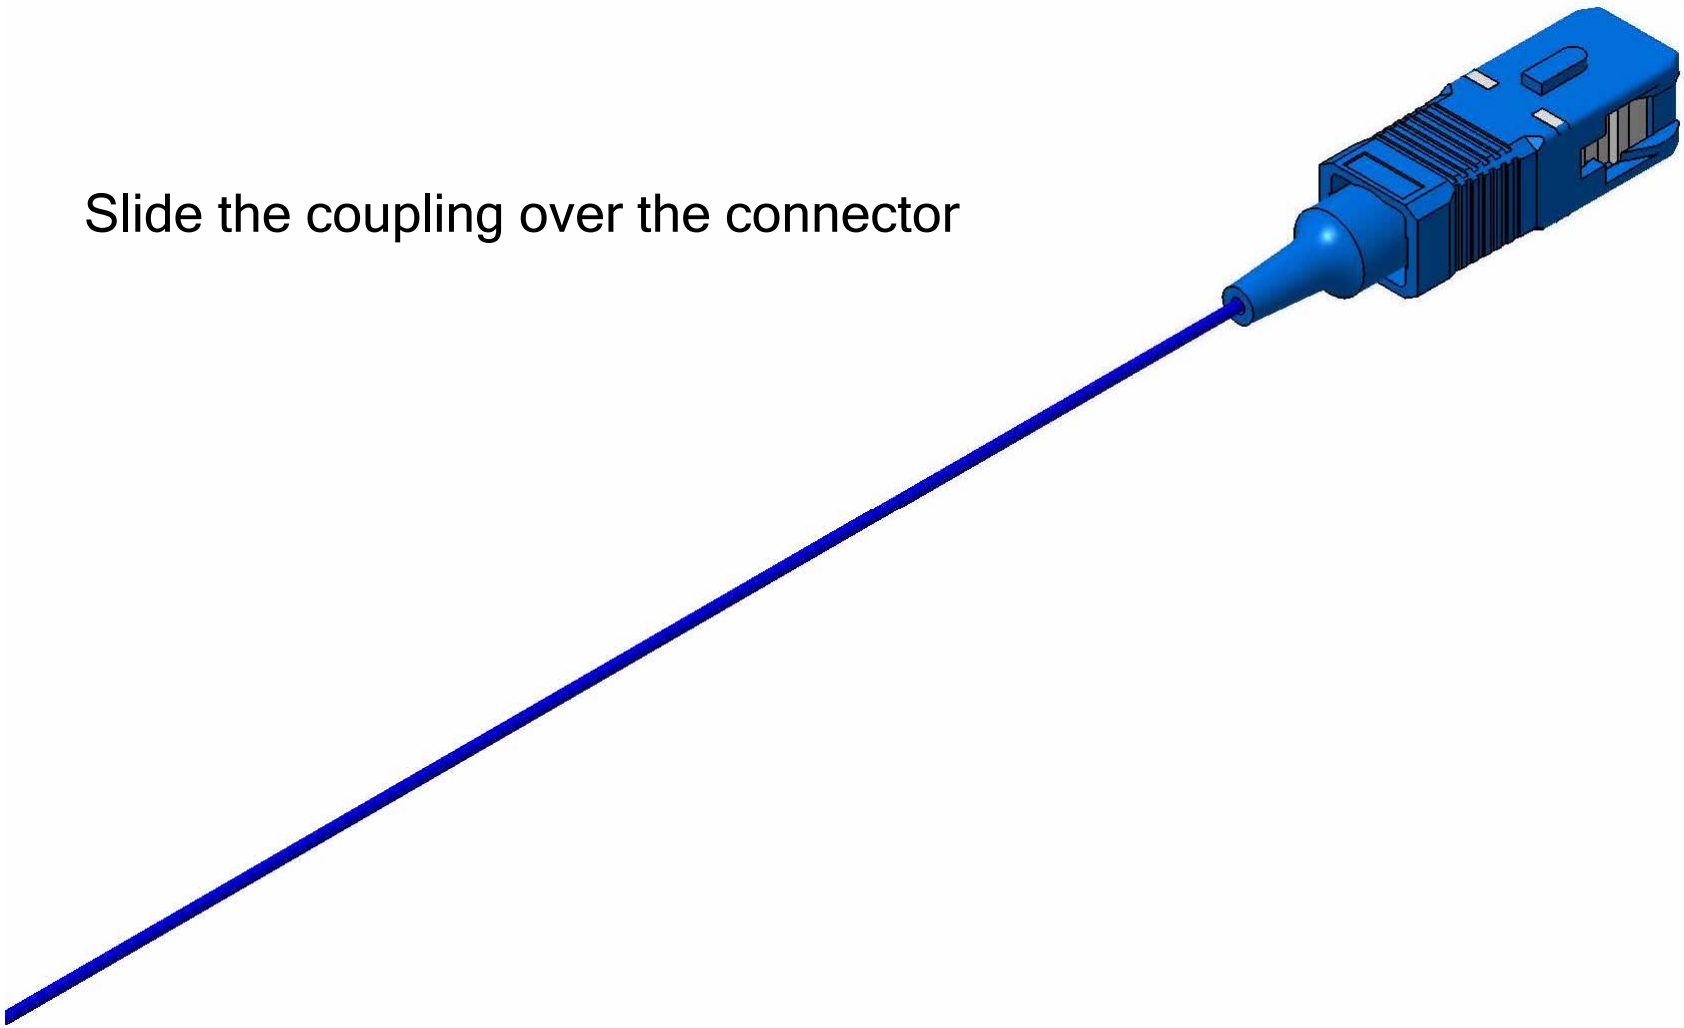

Copyright © 2004 SUNCALL CORP. All rights reserved

Fine Precision, Nano Solution
SUNCALL CORP.

Assembly Process 6

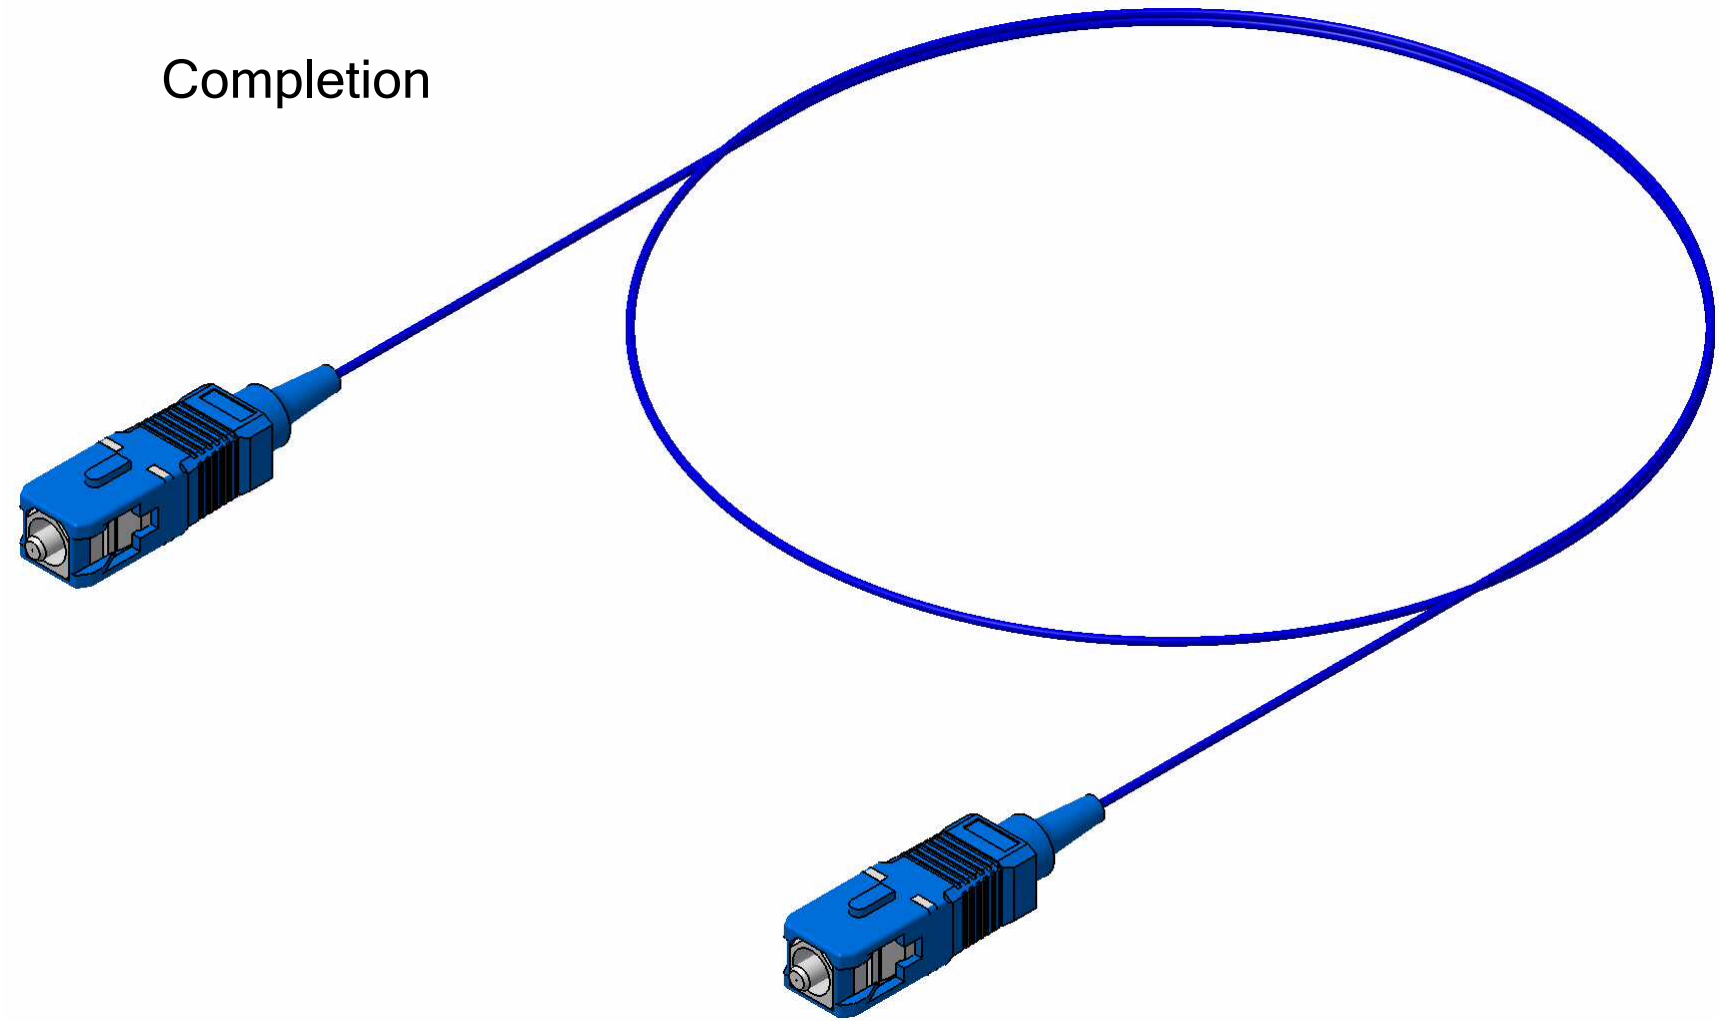

Copyright © 2004 SUNCALL CORP. All rights reserved

Fine Precision, Nano Solution
SUNCALL CORP.